

The Fastest Dry Cabinets

for Drying & Baking Electronic Components



.... 0.5%Rh 125°C


www.x-tremeseries.com



40

35

15

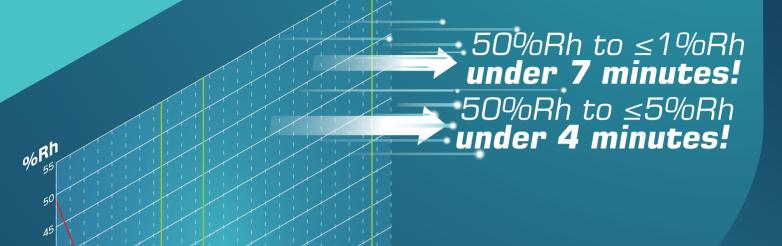

Internal Relative Humidity 0.5% Rh • 95% Rh

The best place for your product



Internal Temperature 2°C-15°C-45°C-60°C-100°C up to 125°C



Sensor Accuracy ±0.3 Rh Humidity ±0.5°C Temperature

Standard Volumes





XL Line (1840 lt)

External Dimensions (WxHxD)	1200 x 1990 x 1050 mm			
Internal Dimensions (WxHxD)	Non Insulated	Insulated		
	1197 x 1654 x 930 mm	1178 x 1634 x 930 mm		
Net Volume	Non Insulated	Insulated		
	1840 lt	1790 lt		
Weight*	280 Kg			
Average Power Consumption*	50W / hour			

^{*} Depends on configuration

XT Line (1250 lt)

External Dimensions (WxHxD)	1200 x 1990 x 750 mm				
Internal Dimensions (WxHxD)	Non Insulated	Insulated			
	1197 x 1654 x 630 mm	1178 x 1634 x 630 mm			
Net Volume	Non Insulated	Insulated			
	1250 lt	1215 lt			
Weight*	190 Kg				
Average Power Consumption*	50W / hour				

^{*} Depends on configuration





XS Line (300-600-900 lt)

External Dimension	ons (WxHxD)					
XS Line Cabinets	XS-300	606 x 1128 x 750 mm				
	XS-600	606 x 1990 x 750 mm				
	XS-900	606 x 1990 x 1050 mm				
Internal Dimensions (WxHxD)		Non Insulated	Insulated			
XS Line Cabinets	XS-300	603 x 792 x 630 mm	584 x 772 x 630 mm			
	XS-600	603 x 1654 x 630 mm	584 x 1634 x 630 mm			
	XS-900	603 x 1654 x 930 mm	584 x 1634 x 930 mm			
Net Volume		Non Insulated	Insulated			
XS Line Cabinets	XS-300	300 lt	285 lt			
	XS-600	625 lt	600 lt			
	XS-900	925 lt	890 lt			
Weight *						
XS Line Cabinets	XS-300	90 Kg				
	XS-600	134 Kg				
	XS-900	160 Kg				
Average Power Consumption*		50W / hour				
* Depends on configuration						

Drying Methods

Auto Dry Cabinets (Dryer)

Auto Dry Dehumidification cabinets are the latest technology solution in the fight against moisture. The main advantage they bring is their plug-and-play nature and the fact that once you plug in the cabinets they virtually work by themselves after that point without the need for consumables.

If you choose to install two dryer units in your Cabinet it will be dehumidifying non-stop as our software makes sure that the dryer units never go to regeneration at the same time. Your products are too valuable to be left in undesirable conditions.

Stop worrying about your products, your time is too valuable. Let us take care of the products and material you store while you continue to do your work.



Smart Nitrogen Cabinets (N₂)

One of the earliest methods of dehumidification is use of dry gas of Nitrogen. Nitrogen purging is an effective method especially where oxidation is a concern as nitrogenous environments are ideal for preventing moisture adsorption and corrosion.

Our Smart Nitrogen System adjusts the utilized gas to minimize the consumption levels while keeping the humidity levels at the desired values, saving your money without comprising the protection of your materials.

Nitrogen 14.007

Hybrid Cabinets (Dryer + N₂)

X-Treme Series Auto Dry Cabinets offer complete solutions which provide you benefits of both systems.

Our hybrid cabinets which have a dryer unit installed alongside with our Smart Nitrogen System saves cost by alternating between nitrogen and the dryer to ensure the fastest, oxidation free storage environment.

When reached the desired levels, Smart Nitrogen System cuts off the gas and hands over the complete operation to the Dryer Unit. Hybrid cabinets provides significant cost and time saving.

They are the fastest dry cabinets in the world!





Humidity Management

Ultra-Fast Dehumidification Rate

X-Treme Series has the fastest recovery time in the market. ≤ 1%Rh in under 7 minutes!

Low Levels of Humidity

Our cabinets can reach the lowest level as 0,5%Rh.

Minimizing the Threat

Multidoor configuration ensures minimal ambient conditions penetrate the cabinet.

Homogenous Distribution

Thanks to the unique design of air circulation system provides homogenous distribution.

Stable Operations & Long-term Usage

The cabinets are designed for stable, reliable operation and have outstanding long-term usage over 10 years.

Continuous Dehumidification

With two dryer units provide continuous and uninterrupted dehumidification.

Humidification

X-Treme Series Cabinets achieve to 95%Rh when the high humidity level required.

Temperature Management

Complete Temperature Control with Heating & Cooling Options

X-Treme Series Cabinets offer 4 heating options for 45°C $-60^{\circ}\text{C} - 100^{\circ}\text{C} - 125^{\circ}\text{C}$. The temperature inside the cabinet is controlled by our smart software platform to achieve stabile temperature.

Thermal Insulation

Double cabinet walls and magnetic gaskets on doors minimize the heat exchange and keep the temperature stable.

Heating up to 125°C

With the 125°C option X-Treme Series provides a cheaper, easier to operate alternative to Reflow ovens, belt furnaces and autoclaves for your baking needs.

Cooling Down to 2°C

X-Treme Series Dry Cabinets offer 3 cooling options for 2°C - 5°C - 15°C. The cooling unit makes sure that the interior of the cabinet is always at the set value if ambient temperature is above it.





Accuracy

High Precision

X-Treme Series Auto Dry Cabinets are designed to meet your needs with excellent accessories. We provide the best conditions for your valuable materials to keep them safe. We invest the best sensors to create the exact conditions you require.

Reliabilty

X-Treme Series have unique sensor which provides accuracy of ± 0.3 %Rh for humidity and ± 0.5 °C for temperature. All related documents and calibration certificates are available.

Ambient Conditions

Our cabinets offer you to monitor and log the outdoor humidity and temperature with outdoor sensors.

Monitoring & Control

Complete Control System

Our user-friendly in-house software is specifically coded for our cabinet and can monitor and control each and every aspect of the operation to the simplest detail.

Datalogger (2 GB)

Datalogger allows users to track and log data of multiple parameters. These can be exported to your computer by internet connection for more detailed analysis.

Remote Monitoring

Remote Monitoring System provides you flexibility to check and monitor humidity & temperature of cabinet from a distance.

The system can send notifications via e-mails to user when the set parameters exceeded.

Details Matter

We provide a real-time clock (RTC) for accurate time stamps, alarms for temperature and humidity and interior illumination options.





Security & Protection

Automatic Door Locks

Features of automatic door locks and operation without keys are optimized process for materials handling and storage.

Unauthorized Access - RFID

Software provides passwords up to 8 operators and prevent unauthorized access to the materials & stored products. You can also access to cabinet by RFID cards.

Smart Security System

The status of the doors is monitored with magnetic switches. The Door Ajar Alarm notifies to user when the door open or not being closed properly.

ESD

X-Treme Series Cabinets are completely ESD safe. Our cabinets are painted with Electrostatic paint and the whole system is grounded from several points.

Independent Systems Working As One

Each System is protected by their own fuses to prevent damage to affect the others. This design prevents large scale damage in a rare case of malfunction.





Customization

Customized cabinets bring you more

The high design flexibility combined with the high standards of precision make our customized cabinets an outstanding benefit for users.


X-Treme Series provides many storage systems such as shelves, sliding shelves, dividers, feeder storage and so much more. Also, many accessories such as PCB racks, HEPA filters, UV Lights, alarm bars are available.

Team up with X-Treme Series for your customized solution

Our team made up exclusively of professional technicians and engineers support you with their combined global-scale experience of more than 30 years.

We give you the freedom to achieve reliable, efficient and stable solutions through various options to X-Treme Series. Please contact us for further details.

Features & Standards

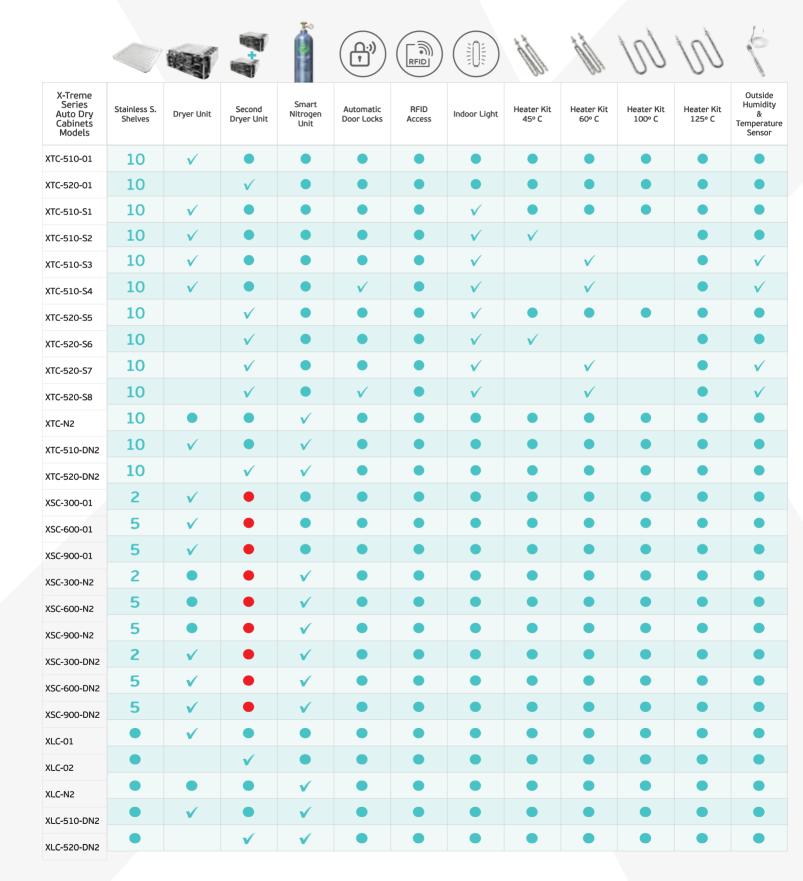



 $\sqrt{\mbox{ Standart }}$ Optional \bigcirc Not Available























Oxygen (O2) Sensor	Datalogger	Remote Monitoring	External Alarm	Stainless S. Sliding Shelves	Reel Holders	Stainless S. U Divider & I Divider	Humidifier Unit	Cooling Unit	Hepa Filter	Feeder Storage Solutions	PCB Holder
•	V	V	•	•	•	•	•	•			•
•	V	V	•	•	•	•	•	•	•	•	•
	V	V	•	•		•		•			
•	V	V	•	•	•	•	•	•	•	•	•
•	V	V	•	•	•	•	•	•	•	•	•
•	V	✓	•	•	•	•	•	•		•	•
•	V	V	•	•	•	•	•	•	•	•	•
•	V	✓	•	•	•	•	•	•		•	•
•	V	✓	•	•	•	•	•	•	•	•	•
•	V	✓	•	•	•	•	•	•			•
•	V	✓	•	•	•	•	•	•	•	•	•
•	V	✓	•	•	•	•	•	•			
•	✓	✓	•	•	•	•	•	•	•	•	•
•	V	✓	•	•	•	•	•	•			•
•	✓	✓	•	•	•	•	•	•	•	•	•
•	V	✓	•	•	•	•		•			•
•	✓	✓	•	•	•	•	•	•		•	•
•	✓	✓	•	•		•		•			•
•	✓	✓	•	•	•	•	•	•		•	•
•	✓	✓	•		•	•					•
•	✓	✓	•		•	•	•		•	•	•
•	✓	✓	•	•		•				•	•
•	✓	✓	•	•	•	•	•	•	•	•	•
•	√	✓	•	•		•		•		•	•
•	✓	✓	•	•	•	•	•		•	•	•
•	V	√	•	•		•					•
	V	✓									



Reference Conditions for Drying SMD Packages and Components



Drying at 5%Rh IPC J-STD-033D

MSL	25° C	40° C	60° C	40° C	90° C
2	Not Required	Not Required Not Required Not		Not Required	Not Required
2a	9 Hours	3 Hours	1 Hour	12 Hours	2 Hours
3	18 Hours	6 Hours	1 Ноиг	22 Hours	3 Hours
4	18 Hours	6 Hours	1 Hour	22 Hours	3 Hours
5	18 Hours	6 Hours	1 Hour	23 Hours	3 Hours
5a	21 Hours	7 Hours	2 Hour	26 Hours	4 Hours
	-				Not Required
	-				15 Hours
	-				15 Hours
	-				16 Hours
	_				16 Hours
5a	3 Days	1 Day	6 Hours	4 Days	16 Hours
2	Not Required	Not Required	Not Required	Not Required	Not Required
2a	6 Days	2 Days	12 Hours	8 Days	25 Hours
3	6 Days	2 Days	12 Hours	8 Days	25 Hours
4	9 Days	3 Days	15 Hours	10 Days	27 Hours
5	9 Days	3 Days	17 Hours	11 Days	28 Hours
5a	9 Days	3 Days	18 Hours	12 Days	30 Hours
	-				63 Hours
2a	21 Days	7 Days			3 Days
3	27 Days	9 Days	2 Days	37 Days	4 Days
4	36 Days	12 Days	3 Days	47 Days	5 Days
5	-	14 Days	4 Days	57 Days	6 Days
5a	60 Days	20 Days	5 Days	79 Days	8 Days
2	60 Days	20 Days	5 Days	79 Days	10 Days
	-				10 Days
	-				10 Days
	_				10 Days
	-		_		10 Days
	_		_		10 Days
2 - 5a	Not applicable	Not applicable	64 days	Not applicable	Not applicable
	2a 3 4 5 5a 2 5a 2 5a 2 5a 6 7 7 7 8 7 8 7 8 7 8 7 8 7 8 7 8 8 7 8	2a 9 Hours 3 18 Hours 4 18 Hours 5 18 Hours 5 18 Hours 5 21 Hours 2 Not Required 2a 3 Days 3 Days 4 3 Days 5 3 Days 5 3 Days 5 4 9 Days 6 Days 9 Days 18 Days 2 18 Days 2 18 Days 2 18 Days 3 27 Days 4 36 Days 4 36 Days 5 42 Days 5 60 Days 6 0 Days 5 60 Days	2a 9 Hours 3 Hours 3 18 Hours 6 Hours 4 18 Hours 6 Hours 5 18 Hours 6 Hours 5 18 Hours 7 Hours 2 Not Required Not Required 2a 3 Days 1 Day 3 3 Days 1 Day 4 3 Days 1 Day 5 3 Days 2 Days 3 6 Days 2 Days 4 9 Days 3 Days 5 9 Days 3 Days 2 18 Days 6 Days 2 18 Days 7 Days 3 27 Days 9 Days 4 36 Days 12 Days 5 42 Days 14 Days <t< td=""><td>2a 9 Hours 3 Hours 1 Hour 3 18 Hours 6 Hours 1 Hour 4 18 Hours 6 Hours 1 Hour 5 18 Hours 6 Hours 1 Hour 5 21 Hours 7 Hours 2 Hour 2 Not Required Not Required Not Required 2a 3 Days 1 Day 6 Hours 3 3 Days 1 Day 6 Hours 4 3 Days 1 Day 6 Hours 5 3 Days 1 Day 6 Hours 5 3 Days 1 Day 6 Hours 6 Hours 1 Day 6 Hours 7 1 Day 6 Hours 8 2 Days 1 Day 6 Hours 9 Days 1 Day 6 Hours 1 Day 6 Hours 1 Day 6 Hours 2 Not Required Not R</td><td>2a 9 Hours 3 Hours 1 Hour 12 Hours 3 18 Hours 6 Hours 1 Hour 22 Hours 4 18 Hours 6 Hours 1 Hour 22 Hours 5 18 Hours 6 Hours 1 Hour 23 Hours 5 18 Hours 6 Hours 2 Hours 2 Not Required Not Required Not Required 2a 3 Days 1 Day 6 Hours 4 3 Days 1 Day 6 Hours 4 3 Days 1 Day 6 Hours 5 3 Days 1 Day 6 Hours 4 4 Days 5 3 Days 1 Day 6 Hours 4 4 Days 5 3 Days 1 Day 6 Hours 4 4 Days 5 3 Days 1 Day 6 Hours 4 4 Days 2 Not Required Not Required Not Required 2 Not Required Not Required Not Required 3 6 Days 2 Days 12 Hours</td></t<>	2a 9 Hours 3 Hours 1 Hour 3 18 Hours 6 Hours 1 Hour 4 18 Hours 6 Hours 1 Hour 5 18 Hours 6 Hours 1 Hour 5 21 Hours 7 Hours 2 Hour 2 Not Required Not Required Not Required 2a 3 Days 1 Day 6 Hours 3 3 Days 1 Day 6 Hours 4 3 Days 1 Day 6 Hours 5 3 Days 1 Day 6 Hours 5 3 Days 1 Day 6 Hours 6 Hours 1 Day 6 Hours 7 1 Day 6 Hours 8 2 Days 1 Day 6 Hours 9 Days 1 Day 6 Hours 1 Day 6 Hours 1 Day 6 Hours 2 Not Required Not R	2a 9 Hours 3 Hours 1 Hour 12 Hours 3 18 Hours 6 Hours 1 Hour 22 Hours 4 18 Hours 6 Hours 1 Hour 22 Hours 5 18 Hours 6 Hours 1 Hour 23 Hours 5 18 Hours 6 Hours 2 Hours 2 Not Required Not Required Not Required 2a 3 Days 1 Day 6 Hours 4 3 Days 1 Day 6 Hours 4 3 Days 1 Day 6 Hours 5 3 Days 1 Day 6 Hours 4 4 Days 5 3 Days 1 Day 6 Hours 4 4 Days 5 3 Days 1 Day 6 Hours 4 4 Days 5 3 Days 1 Day 6 Hours 4 4 Days 2 Not Required Not Required Not Required 2 Not Required Not Required Not Required 3 6 Days 2 Days 12 Hours



High-end Technology

7" Touch Screen Panel


Our cabinets are equipped with variable and high-end features. One of the most important feature is the touch screen panel. The panel provides 800x480px resolution in 7" touch capable area. The user can reach all important data in the cabinets with simple clicks.

Industry 4.0

X-Treme Series Auto Dry Cabinets can be reached remotely via computers, phones and tablets which are using Wi-Fi and ethernet connections. Humidity and temperature values can be followed instantly. All datalogger parameters can be monitored and graphed for your analysis.





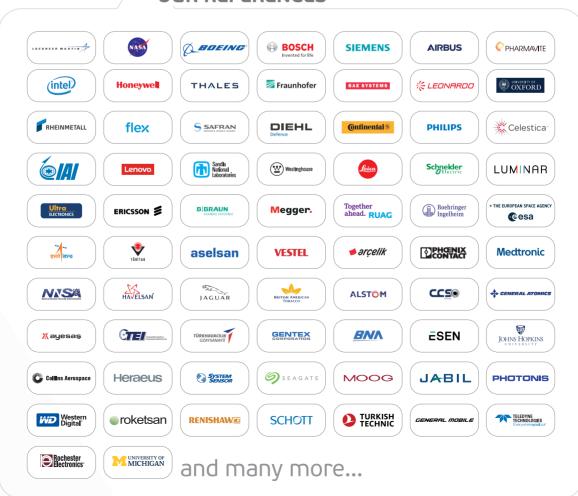



The Fastest Dry Cabinets

for Drying & Baking Electronic Components

Manufactured by EMT Electronics

Çamlıca Mahallesi, Anadolu Bulvarı No:16 Regnum Ticaret Merkezi, B Blok No: 5/1 06200 Yenimahalle ANKARA - TURKEY T: +90 312 472 20 60 F: +90 312 472 20 65 info@x-tremeseries.com www.x-tremeseries.com











Compliance with IPC/JEDEC-J-STD-033D standards Compliance with CE and Rohs